


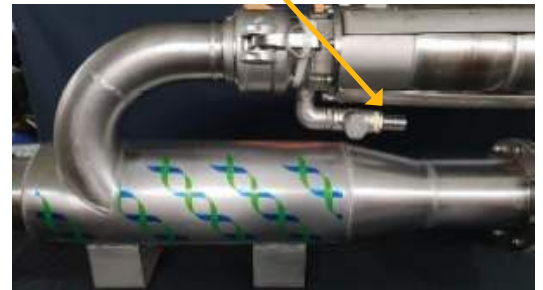

Remove plug from water outlet and fit hose tail fitting into water pump outlet in place of plug.



Connect to ROV valve pack.



Clamp Jetter ring onto suction inlet.



Jetter ring nozzle holes.

JETTER RING PERFORMANCE

4.1 bar (60psi) pressure drop across the Jetter ring nozzle holes with around 90lpm of water flow through the nozzle holes.

JETTER RING VALVE ACTUATOR HYDRAULIC HOSES AND CONNECTORS.

Jetter on: 1/4" Hydraulic Hose -4 JIC Female fittings 3 mtr long.

Jetter off: 1/4" blow Hydraulic Hose -4 JIC Female fittings 3 mtr long.

JETTER RING VALVE ACTUATOR HYDRAULIC SUPPLY

Hydraulic flow: 10 lpm minimum (2.6 gpm minimum).

Hydraulic Pressure: 68 bar minimum (1000 psi minimum).



Jetter ring nozzle holes

